

# Startup TOOLS

Version 10.0.1.0

---

## Description of all functions

© 2023 INNEO Solutions GmbH

# Contents

## I. GENIUS TOOLS Parameter

1. Parameter management („Parameter“)	2
2. Bills of materials in assembly mode („Assembly Report“)	3
3. Multi-dimensional editing („Dimension“)	4
4. Material selection („Material“)	5
5. Ring menu and mapkey management („Quick Access“)	5
6. Transferring model properties („Value Transfer“)	6
7. Name Generator	6
8. Editing assembly parameters	7
9. Converting multibodies into assemblies („Multibody to Assembly“)	7
10. Open / create drawing	7
11. Inspection and change symbols for drawings („Inspect“)	7
12. Export table to EXCEL and CSV	8
13. Create tolerance tables on drawings	8
14. Javascript Editor	8
15. Configuration Utility	8
16. Further useful tools („Utilities“)	8
16.1. 3D Note Form	8
16.2. CS Assembler	9
16.3. Export Points	9
16.4. Extend Relations	9
16.5. Full Backup	9
16.6. Load Save Converter	9
16.7. Open Base Model	9
16.8. Select Surfaces by Color	9
16.9. Work Dir Manager	9




# I. GENIUS TOOLS Parameter

GENIUS TOOLS Parameter contains the following components.

GENIUS TOOLS Parameter is part of the product package Startup TOOLS.

## 1. Parameter management („Parameter“)

The component *Parameter* is particularly suitable for creating uniform meta data and using it for the automated generation of parts lists, as well as for preliminary calculations or for a connection to commercial systems. The graphical user interface can be configured for the user, for example to define mandatory input fields as to ensure the completeness of the master data and a uniform, up-to-date database.

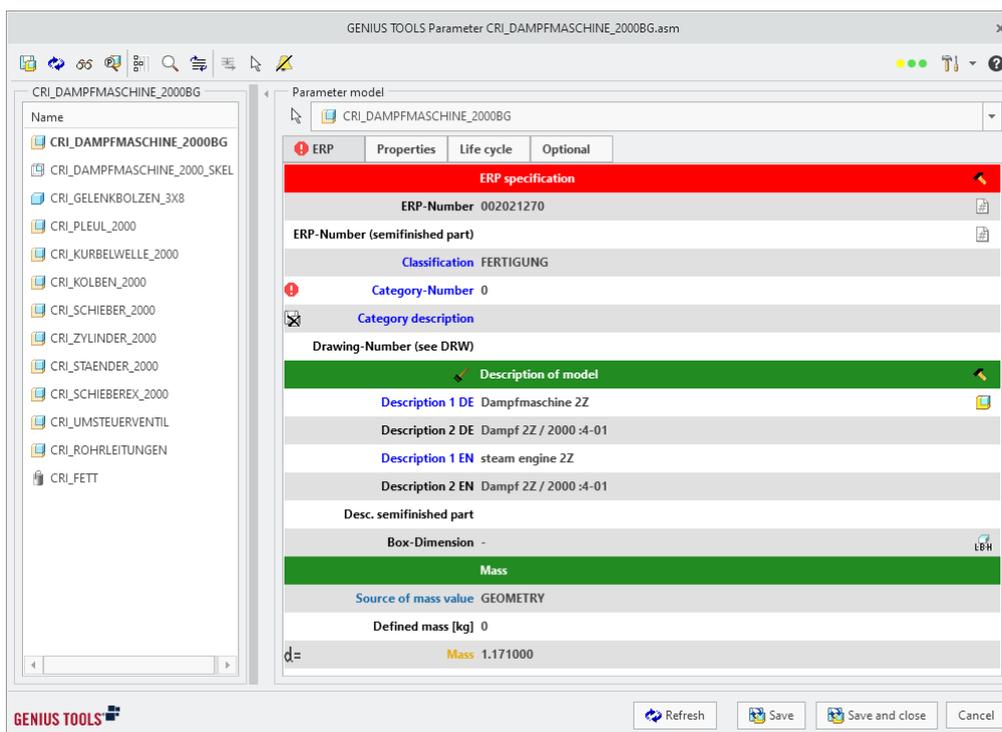

The following functions are available:

- classifiable meta data definition including
  - a mechanism for auto-selection of parameter definitions
  - freely configurable groupings
- easy creation of parameters
  - with default properties for all types
  - specification for effective ranges (parts, bodies, assemblies and drawings)
- easy editing of parameters by means of




- free input
- lists and tables (from files and databases)
- auto-suggestion function
- format checks
- input dependencies
- adoption of parameters from other Creo models
- individual Creo model tree configuration

## 2. Bills of materials in assembly mode („Assembly Report“)

The component *Assembly Report* allows users to create reports, such as a bills of materials (BOM), in assembly mode and generates item numbers as component parameters for further use in Windchill, Creo View and Creo drawing mode. BOM and other reports can be customized for each individual assembly using a graphical editor.

The following functions are available:

- display of tables with different display modes, e. g. single-level, multi-level and bulk bill of materials
- definition of variable columns, such as
  - assembly and part parameters
  - assembly component parameters
  - report parameters (file name, assembly level, model type, quantity, mass etc.)
  - position numbers (as assembly component parameter)
- assignment of position number (if used in BOM)
  - Start and increment value, multiple number ranges, manually editable
- multiple filtering and multiple sorting by all parameters
- export of reports to Microsoft Excel (with template) or as CSV file

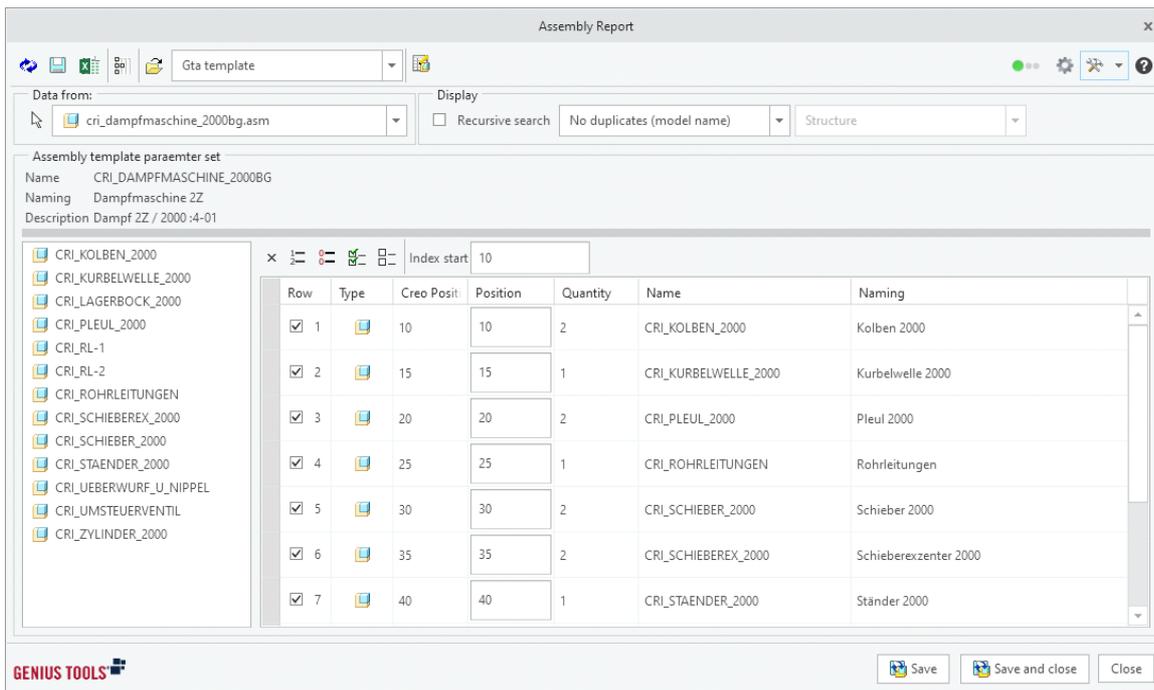


### 3. Multi-dimensional editing („Dimension“)

The component *Dimension* allows simultaneous and fast editing of dimension values and names of a part, an assembly or the subcomponents of an assembly, as well as variable UDF dimensions.


The following functions are available:

- display and modify dimensions with properties: dimension type (linear, angle, diameter, radius) dimension name and value, tolerance type, dimension status (in relations, family tables etc.)
- filtering of displayed dimensions by name, dimension type and tolerance type
- free text search for dimensions including auto-suggest function
- highlighting dimensions in the graphics window when selecting a value in the GENIUS TOOLS Dimension dialog
- easy renaming of dimensions
- quickly displaying the original Creo dialog “Dimension properties” and relations dialog (for relation-driven dimensions)
- fast assignment of dimensions to family tables
- saving the values as CSV-file

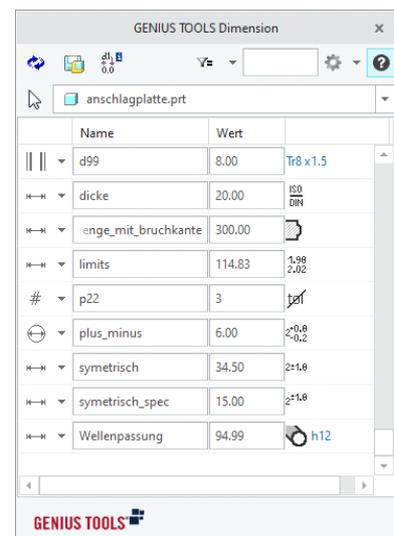

## 4. Material selection („Material“)

The component *Material* allows users to select materials based on various properties and assign them to a model or body.

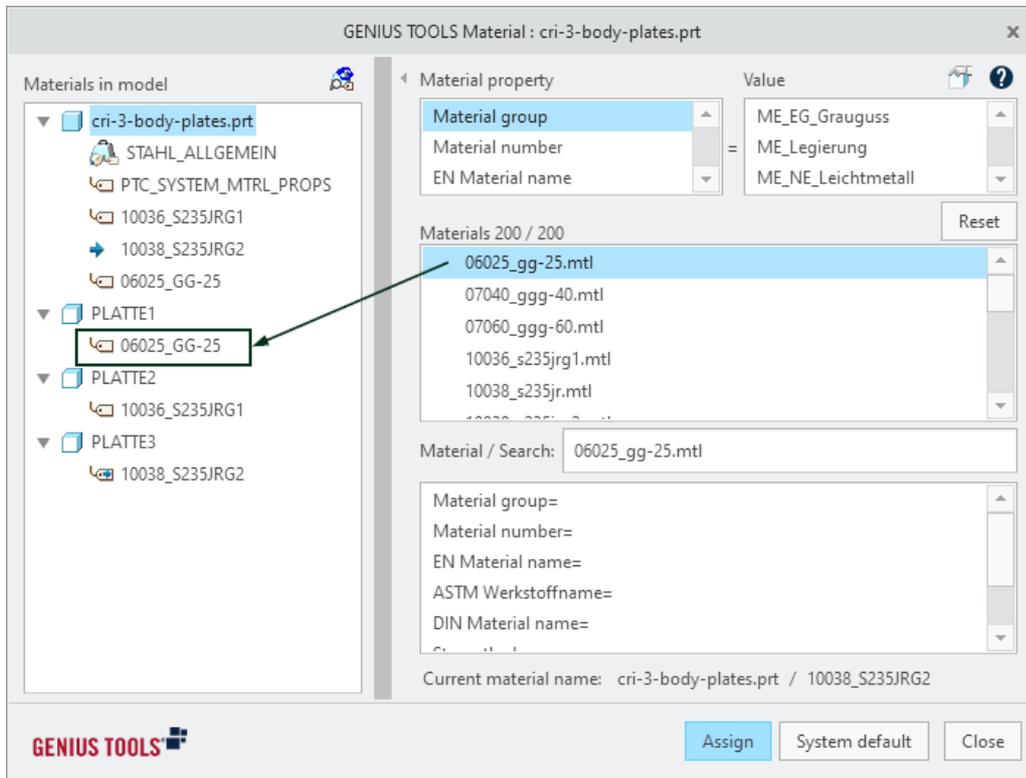


The following functions are available with the graphical editor for material selection:

- make material files from the PRO\_MATERIAL\_DIR directory uniformly available to all users.
- manage materials with material attributes and associated values
- adjustment and representation of the material data, e. g.
  - output in different languages
  - provision of extra information (documents, URL)

## 5. Ring menu and mapkey management („Quick Access“)

The component Quick Access is a mode-sensitive ring menu for Creo Parametric. It allows starting mapkeys (commands) with short mouse travel which greatly accelerates the work with Creo Parametric.

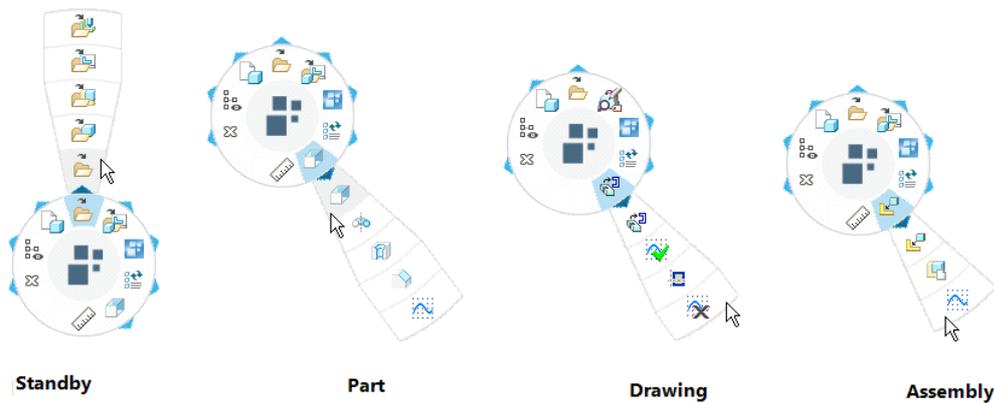

The following functions are available:

- use of regular and intelligent mapkeys. (Latter have extended functionality and allow using variables, parameters and placeholders.)
- definition of commands depending on mode and selection
- different usage scenarios:
  - central configuration
  - user-specific configuration
  - simultaneous central and user-specific configuration
- easy-to-use graphical editor for a homogeneous operating environment
- export and import of all customized mapkeys with images and descriptions for easy data exchange

## 6. Transferring model properties („Value Transfer“)

This component can be used in assembly mode to change numerous values in dimensions and parameters as well as material definition files of assembly components in one step.

The following functions are available:

- search for assembly components with optional filters and view search results in a clearly laid out table format
- display of the current parameter values for each assembly component before each value change
- fast transfer of an assembly parameter (e. g. project number) to all assembly components

## 7. Name Generator

The component *Name Generator* assigns names with sequential numbering for file names of parts, sheet metal parts and assemblies. Name Generator can be used both individually on stand-alone workstations (local) and in a network (global).





- free placement of tables that show the properties and numbering of all inspection symbols
- clean documentation of all changes on a drawing with the Inspect Revision dialog
  - creating a snapshot of all inspection characteristics on a drawing at a specific point in time
  - defining a revision level of a drawing with a drawing revision parameter and display a history of all revisions

## 12. Export table to EXCEL and CSV

These functions fill a file template with parameters and data from cells of tables, e. g. of a Creo drawing tab.

## 13. Create tolerance tables on drawings

This function creates a tolerance table at a freely selectable location on a drawing using pre-defined tolerances.

## 14. Javascript Editor

With *Javascript Editor* you can develop and test JavaScript code in several GENIUS TOOLS components.

## 15. Configuration Utility

*Configuration Utility* is an interface for editing all configuration options and saving them to the correct locations.

The following functions are available:

- view, modify, comment or delete individual configuration options for each level
- quickly check different configuration variants using the memory function of variants

## 16. Further useful tools („Utilities“)

### 16.1 3D Note Form

Enables quick modification of dimension and parameter values in the notes on the model via editable form masks.



## 16.2 CS Assembler

Automates the assembly of components into an assembly using defined coordinate systems.

## 16.3 Export Points

Outputs reference points (single points or point fields) or dynamically generated curve points (X-Y-Z values) to a PTS or DAT file.

## 16.4 Extend Relations

Adds more functions to model relations that can be used to create parameters for models and bodies.

## 16.5 Full Backup

Quickly saves the current model with all dependent data.

## 16.6 Load Save Converter

Saves Creo objects from previous Creo-, Wildfire- or Pro/ENGINEER versions in the currently used version.

## 16.7 Open Base Model

Opens geometric base models that are the reference source for a feature.

## 16.8 Select Surfaces by Color

For selecting surfaces of the same color or all uncolored surfaces.

## 16.9 Work Dir Manager

Automatically collects all directories used during the work process and enables the current working directory to be changed quickly.



Copyright 2023 by:  
INNEO Solutions GmbH  
IT-Campus 1  
73479 Ellwangen  
Germany

This documentation is protected by copyright. All rights reserved. Without prior written consent of an authorized representative of INNEO Solutions GmbH it must not be copied, photocopied, reproduced, translated, communicated or converted to electronic or machine readable form in whole or in part. The unauthorized use of the documentation can lead to a claim for liquidated damages or legal prosecution. INNEO Solutions GmbH does not accept liability for possible faulty information in this documentation and the consequences resulting from such.

Note on registered trademarks: Most of the software, hardware and trade names mentioned in this documentation are also registered trademarks of the respective software manufacturers.

Registered trademarks and trade names of INNEO Solutions GmbH: GENIUS TOOLS, Startup TOOLS, INNEO